


Hi Vue Self-Adhesive Fresnel Lens

Fitting Instructions – Fit Lens to Passenger Window

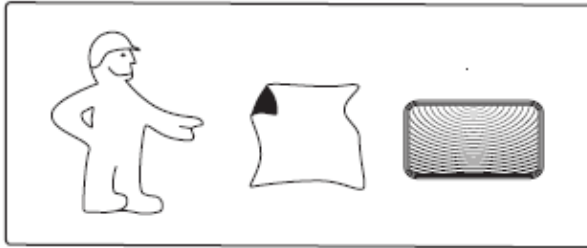

These Fitting Instructions Apply to All Hi Vue Fresnel Lens Models Including: A4 size PVC lens, A5 size PVC lens & A5 size Acrylic lens.

Also applicable to **Vantage Point** Van lens

1 ↑ TOP ↑

TRUCK

View Downwards & Outwards

↑ TOP ↑

VAN

View from Van Driver Position

Back & Outwards

2

Clean & Dry Inside Window

3

Choose Window Fitting Position

4

Peel back adhesive & fit **inside** cab passenger window

Do **not** fit to outside


5

TRUCK

VAN

Avoid opening/closing passenger window for 3 days to allow best bond to glass.

Check close proximity blind spot view through lens

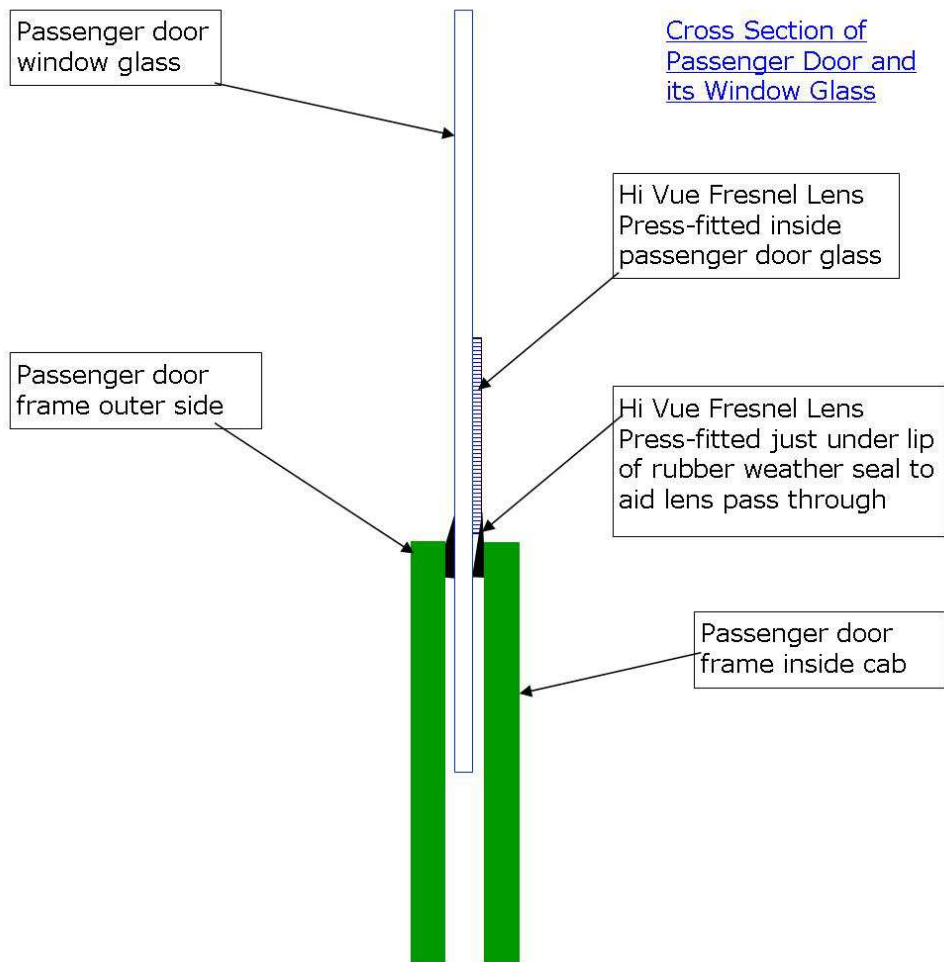

Cross Section of Passenger Door and its Window Glass

WARNING

LENS FITTING

Additional Fitting Notes:-

Use a clean cloth or soft cardboard to press the adhesive surround firmly to the glass.

Important

Once the lens is in place, please place the cloth or cardboard over the lens again and **press right around the adhesive edge very firmly** for a second time, to ensure that a strong bond is achieved.

Beware—Rigid Acrylic Lens

Do not use your un-protected fingers to press along the Acrylic material lens edges as they can be sharp.

Ensure Fresnel Lens Stays Bonded—Reduce Window Weather-Seal Resistance

Where a rubber window weather-seal on the passenger window side is particularly tight, please lift the rubber seal away from the inside of the window glass during press fixing of the lens in place, - just enough to tuck the bottom edge of the lens under the inside rubber seal. This will ensure the lens does not have to pass through the window's rubber seal when the window is lowered and therefore much less friction will be exerted against the lens edge during the process.